



PROFESSIONAL SHOW LIGHTING

GOLDEN SCAN 3

HMI 575
HMI 1200
HMI 1200 TV

FUNZIONE CANALI ED OPZIONI CHANNEL FUNCTION AND OPTIONS FONCTION DES CANAUX ET OPTIONS KANALFUNKTIONEN UND-OPTIONEN FUNCION DE LOS CANALES Y OPCIONES

CHANNEL	6 CHANNEL OPERATION (option 4 OFF)	8 CHANNEL OPERATION (option 4 ON)
1	IRIS/ GOBO ROTATION	IRIS
2	COLOUR WHEEL	COLOUR WHEEL
3	GOBO/C.T.C./PRISM/FROST SELECTION	C.T.C./PRISM/FROST SELECTION
4	DIMMER/STOPPER/STROBE	DIMMER/STOPPER/STROBE
5	PAN	PAN
6	TILT	TILT
7	–	GOBO SELECTION
8	–	GOBO ROTATION

La scelta delle opzioni si effettua commutando i microinterruttori secondo le indicazioni sotto riportate.


Select the options by setting the microswitches as indicated.

Pour choisir les options, commutez les microswitch en fonction des indications ci-dessous.

Die Wahl der Optionen erfolgt durch Umschaltung der Mikroschalter gemäß den unten gelieferten Angaben.


Para definir las opciones, disponer los microconmutadores como se indica a continuación.

OPTIONS

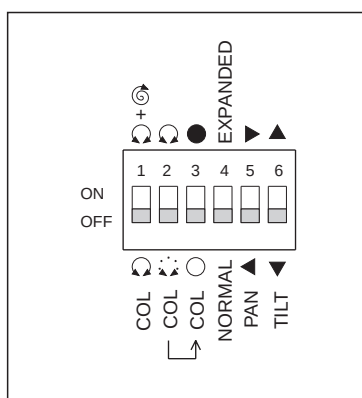


OPTION		FUNCTION
1	ON	Abilitazione effetto rainbow <i>Rainbow effect enable</i> Activation effet rainbow <i>Einschaltung Regenbogeneffekt</i> Habilitar efecto arco iris
	OFF	Disabilitazione effetto rainbow <i>Rainbow effect disable</i> Désactivation effet rainbow <i>Ausschaltung Regenbogeneffekt</i> Inhabilitar efecto arco iris
2	ON	Movimento lineare del disco colori <i>Linear movement of the colour wheel</i> Mouvement linéaire du disque de couleurs <i>Stufenlose Bewegung des Farbrads</i> Movimiento lineal del disco de colores
	OFF	Movimento a passi fissi del disco colori <i>Stepped movement of the colour wheel</i> Mouvement à pas fixes du disque de couleurs <i>Schrittweise Bewegung des Farbrads</i> Movimiento a pasos fijos del disco de colores
3	ON	Abilitazione oscuramento durante il cambio colore (solo con opzione 2 OFF) <i>Light blacking during colour change enable (only with option 2 OFF)</i> Activation obscurcissement pendant le changement de couleur (uniquement avec option 2 OFF) <i>Shutter-Aktivierung während des Farbwechsels (nur bei Option 2 OFF)</i> Habilitación oscurecimiento durante cambio de color (sólo con opción 2 OFF)
	OFF	Disabilitazione oscuramento durante il cambio colore <i>Light blacking during colour change disable</i> Désactivation obscurcissement pendant le changement de couleur <i>Shutter-Deaktivierung während des Farbwechsels</i> Inhabilitación oscurecimiento durante el cambio de color
4	ON	Canali 7-8 abilitati <i>Channel 7-8 enabled</i> Canaux 7-8 validé <i>Kanäle 7-8 aktiviert</i> Canales 7-8 habilitados
	OFF	Canali 7-8 disabilitati <i>Channel 7-8 disabled</i> Canaux 7-8 invalidé <i>Kanäle 7-8 deaktiviert</i> Canales 7-8 inhabilitados
5	ON	Inversione movimento orizzontale (PAN) <i>PAN direction change</i> Inversion mouvement horizontal (PAN) <i>Umkehr Horizontalbewegung (PAN)</i> Invertir movimiento horizontal (GIRO)
	OFF	
6	ON	Inversione movimento verticale (TILT) <i>TILT direction change</i> Inversion mouvement vertical (TILT) <i>Umkehr Vertikalbewegung (TILT)</i> Invertir movimiento vertical (INCLINACIÓN)
	OFF	

• IRIS/GOBO ROTATION (6 channel operation) - channel 1

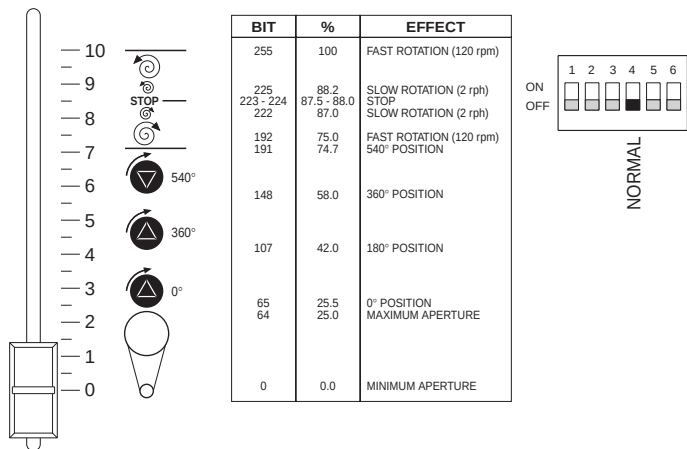


• IRIS (8 channel operation) - channel 1

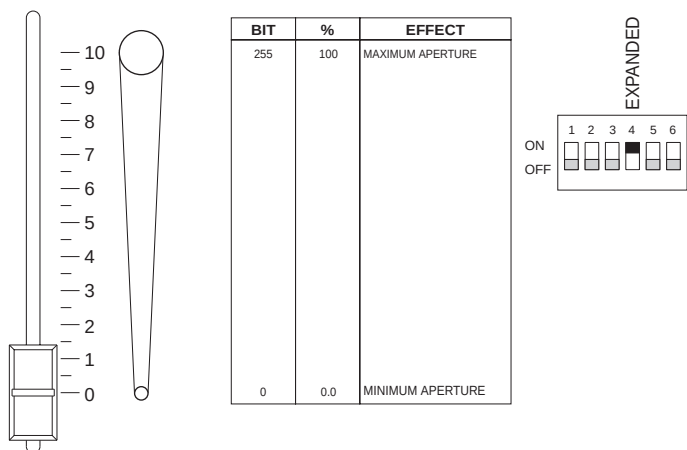


• COLOUR WHEEL - channel 2


Operation with options 1, 2 and 3 OFF

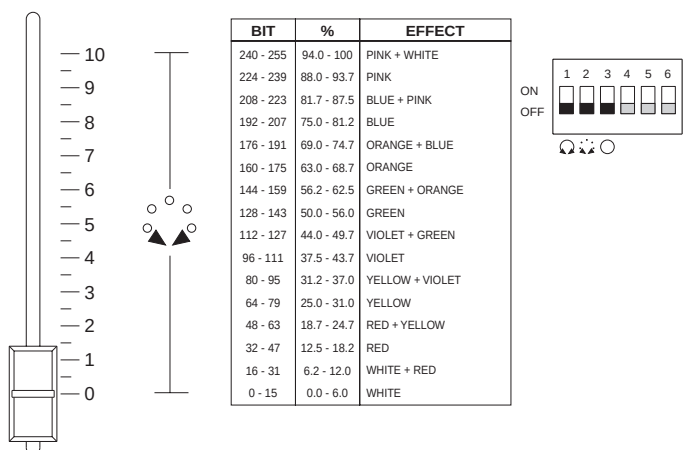


Operation with option 1 ON (option 2 OFF)

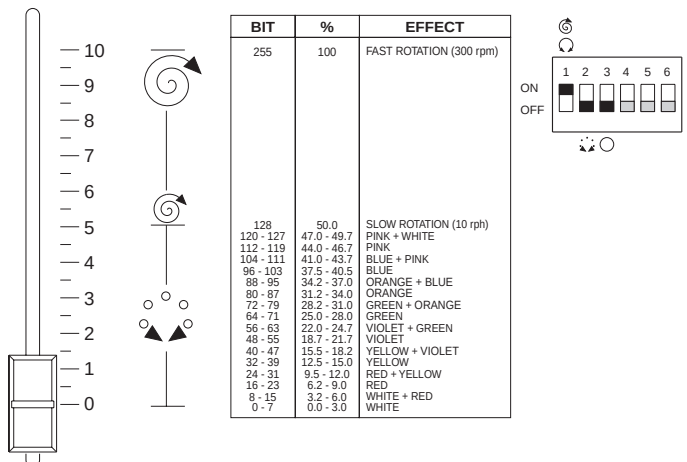


Operation with option 2 ON (option 1 OFF)

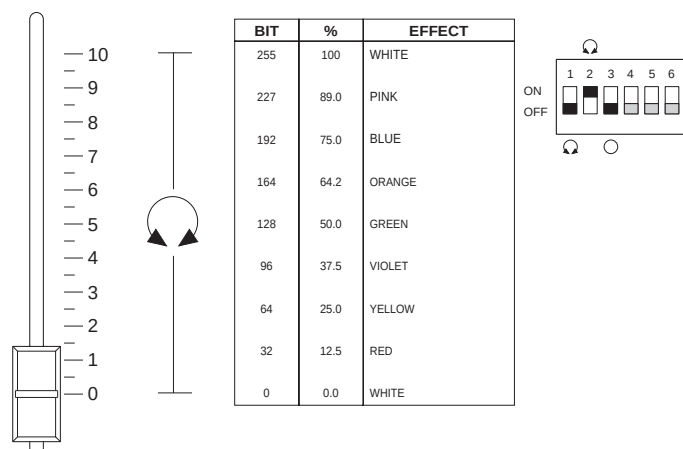


Operation with option 1 and 2 ON

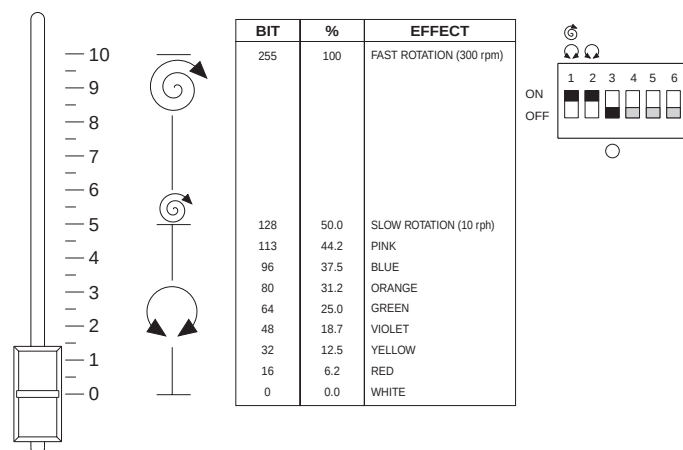


• GOBO/C.T.C./PRISM/FROST SELECTION (6 channel operation) - channel 3

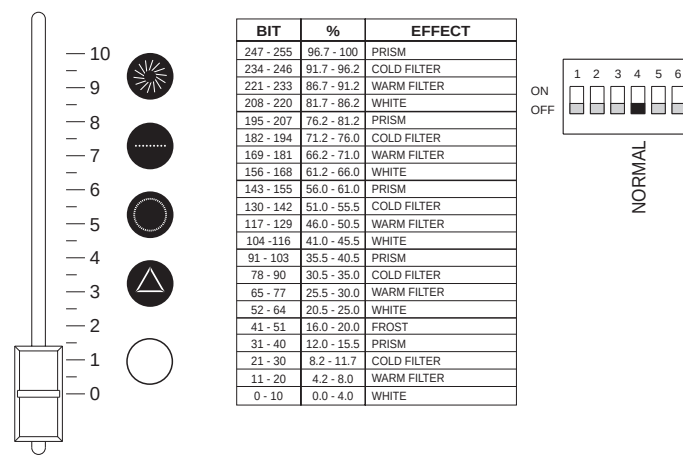

• C.T.C./PRISM/FROST SELECTION (8 channel operation) - channel 3

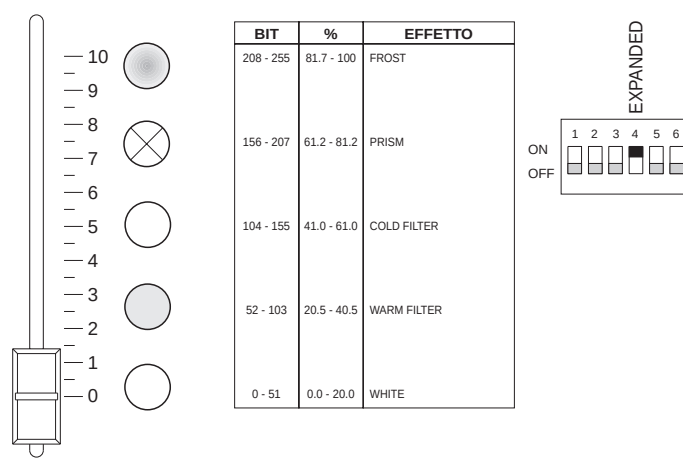


• DIMMER/STOPPER/STROBE - channel 4

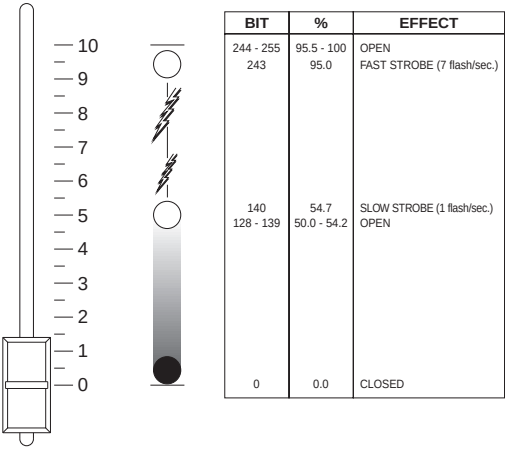


• PAN - channel 5

Operation with option 5 OFF

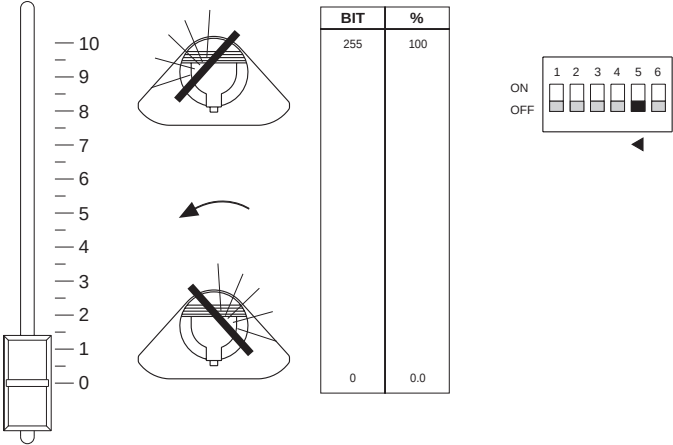


Operation with option 5 ON

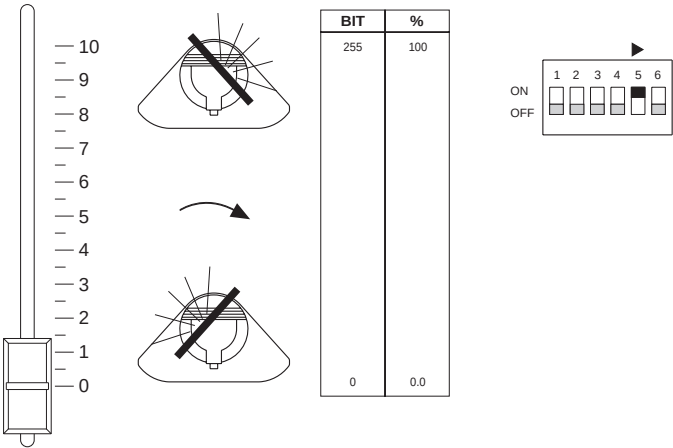


• TILT - channel 6


Operation with option 6 OFF

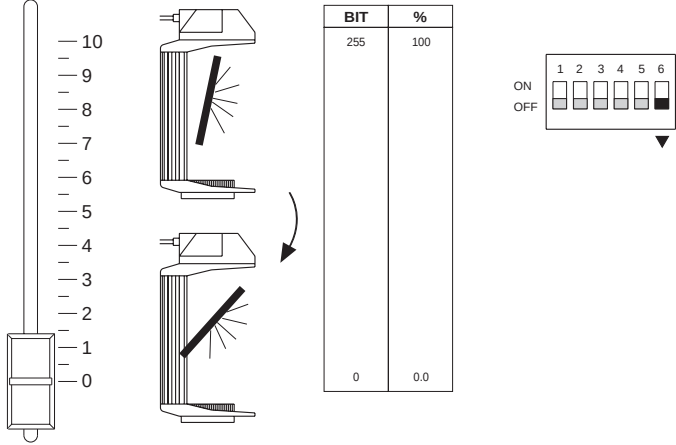

Operation with option 6 ON

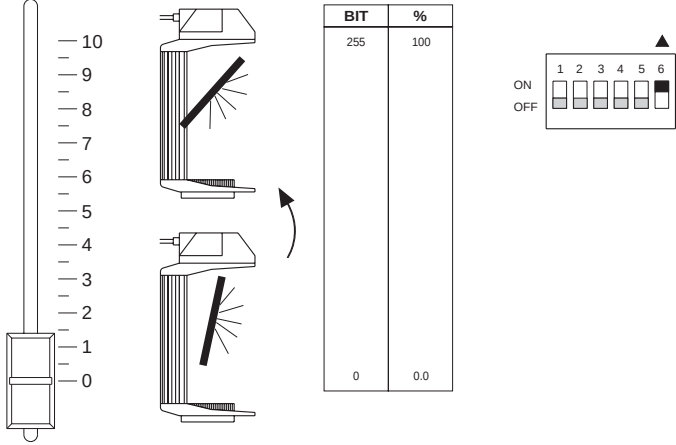

• GOBO SELECTION (8 channel operation) - channel 7

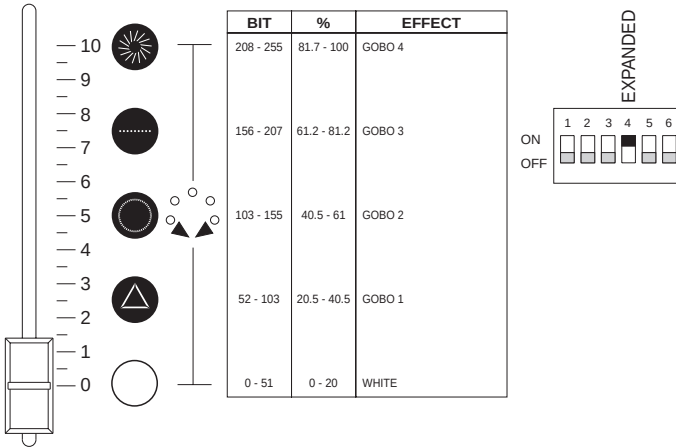

• GOBO ROTATION (8 channel operation) - channel 8

